mv-06_brief instruction.txt

- -Power AC -> CN8
- -Infra red sensor -> CN3

(left is 1, middle is Ground, right is 5V, receiver facing you)

- -input selector (3 legs) -> CN4:
 - (middle is b, left and right is a,c, just try, still work)
- -CN5 is for LED displays for input selector , you may drill 5 holes for the LED and connect to the CN5
- -For the 5.1 channel:
- -connect from volume board FL, FR,FC, RR, RL to input board related connectors (7 pins connectors
- , subwoofer connect to FC .
- -connect Volume control board to input selector board from CN1 to BN1, and so on.
- -connect volume control board BN2 to input selector board CN2 and so on.
- -connect Volume control baord BN7 to your amp board signal input connectors.

(balance signal need to connect SGND/ R+/L+/R-/F)

- -R18: if you connect it up, the potentiometer will not turn back to 7 oclock when you power on the amplifier.
- -R17: if you connect it up, the potentiometer will not turn back to 7oclock.
- -MON on remote: press 1 time, Volume turn up/down faster, press 1 more time, slower.