


DIY Gene

A-680/M-9/M-10 Wiring Diagram

Part 1 : From IEC Socket to Transformer

Assumption: Power supply AC220-240V, if use for AC110V, please connect the transformer's line 2 and line 4 together and put line 3 and line 1` together

From Fuse – Connect Part 1 & 2 at the Inner side
To Transformer – Connect Part 1 & 2 at the Outer side

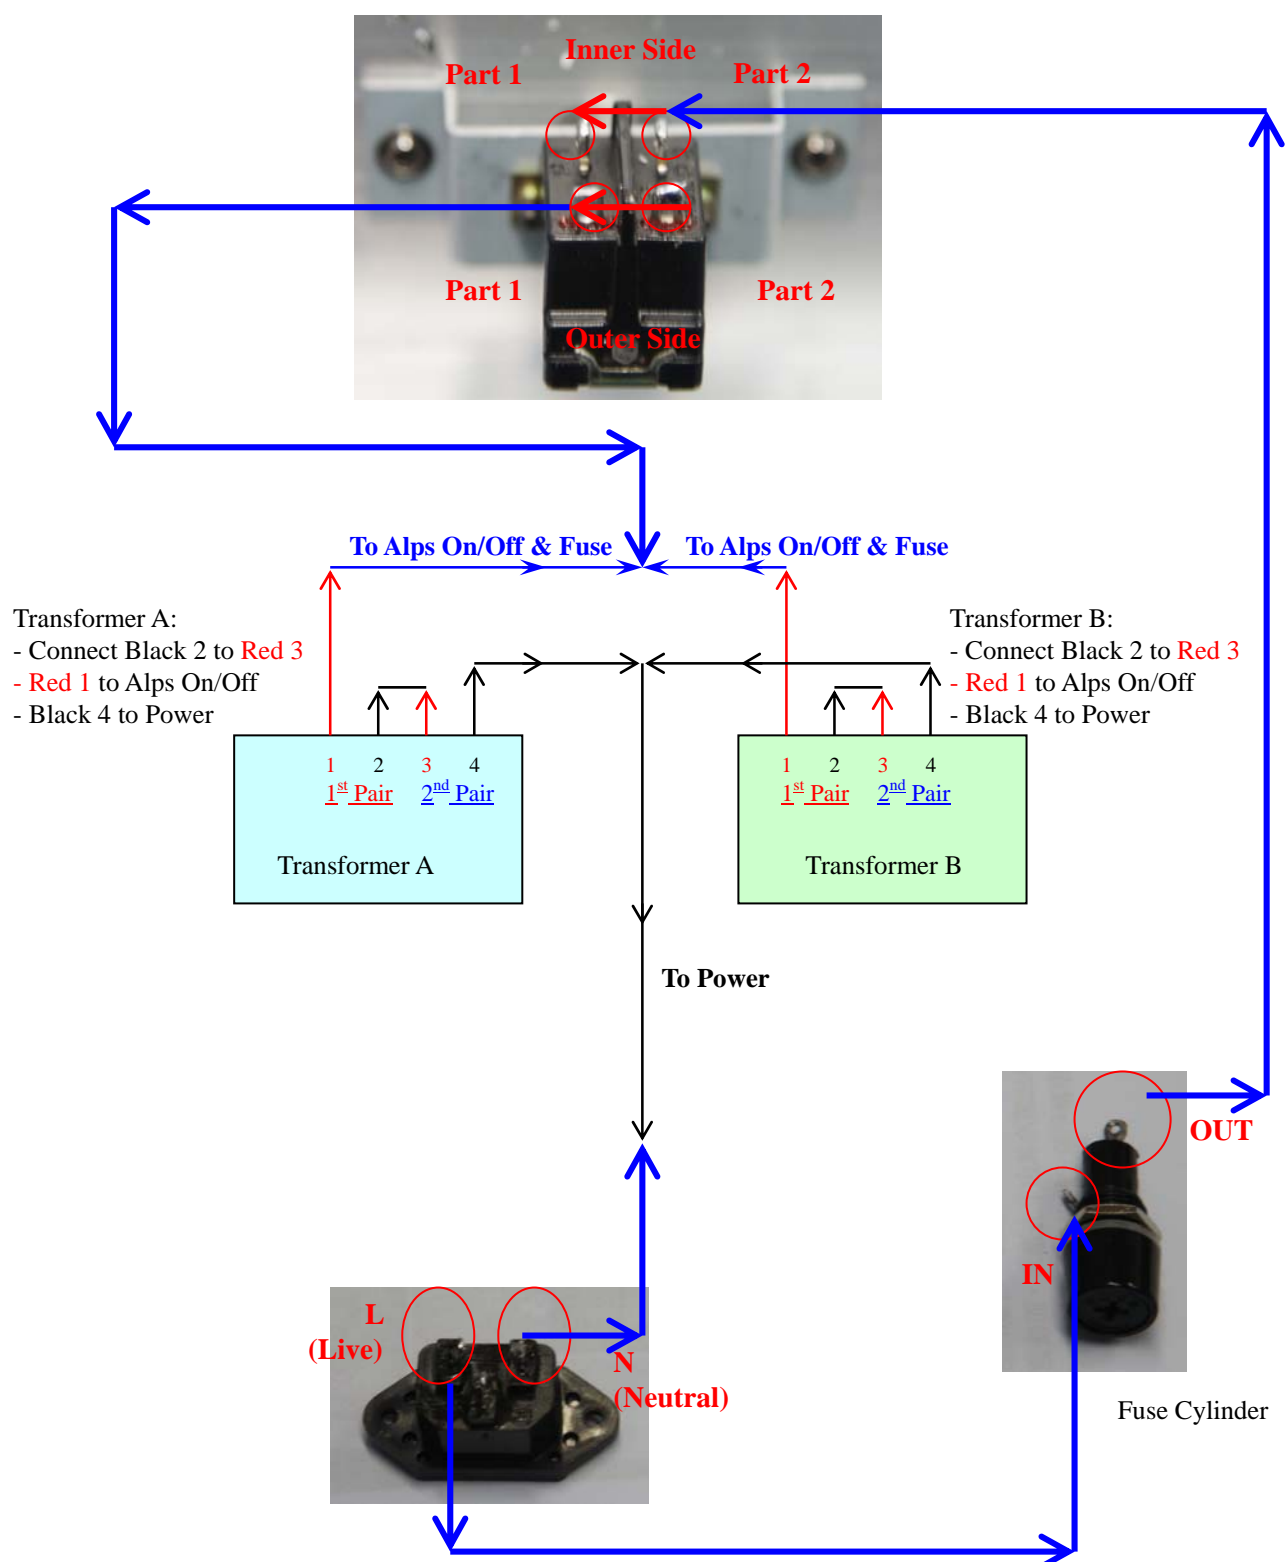

Part 2 – From Transformer Secondary to Power Rectifier

